




Installation Guide  
User Guide

7106 7206  
Peeler Unit

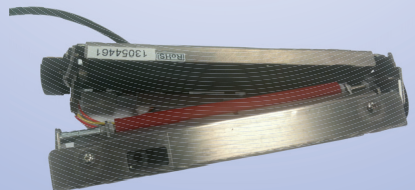



# Installation Guide


---

- 0 The following installation shows a 7106 printer. The peeler installation for 7206 printers follows the same steps.
- 1 Before installing the Peeler Unit
- 1-1 Remove the plastic front cover on the front side of the printer upward as shown below.  
Be careful that you do not touch other parts when removing the front cover.



- 1-2 Remove the screw (M3 X 6) of the motor cover and take the motor cover out as shown below.

*Remove the  
screw and the  
motor cover*

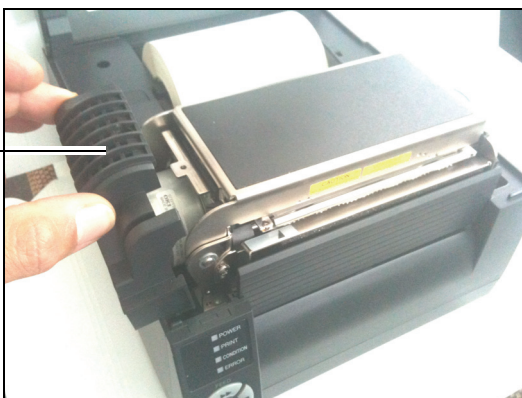

- 1-3 Remove the screw (M3 X8, for plastic) and take the connector cover out as shown below.


*Remove the screw and the connector cover*



## 2 Installing the peeler

- 2-1 While inserting the peeler cable in the space (A) between the paper feed motor and the printer housing, match the protruded pins of the peeler unit to the holes of the front of the mechanism unit.

Set the peeler unit to the printer using the accessory screws (3 pcs M3 X 6) enclosed.

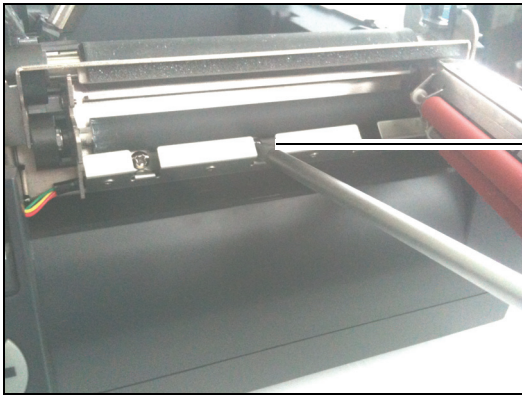



*Set 3 pcs screws (M3X6)*

## 2-2 Connecting the peeler unit cable

Connect the peeler unit cable connector to the receptacle of the printer after setting the peeler cable in the printer housing.

**Note:** Set the peeler cable (A) not to touch the print head-up spring (B) of the mechanism unit.

It is allowed to set the peeler cable under the paper feed motor instead of the side of the paper feed motor.

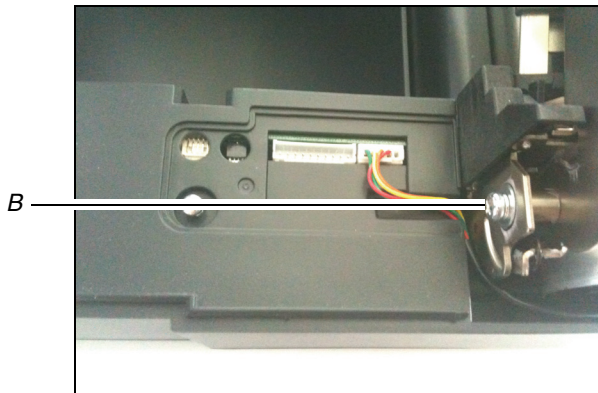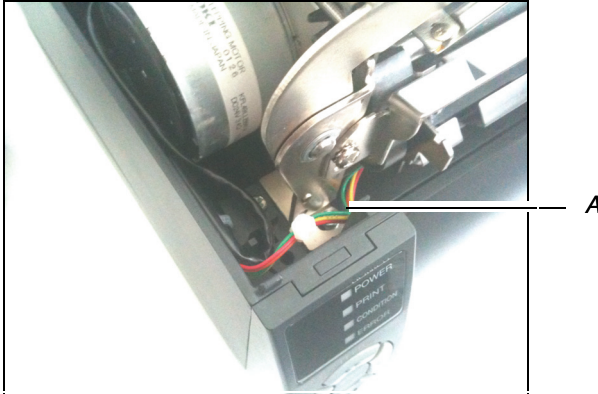

### 3 Reinstalling the covers

Reinstall the connector cover (M3 X 8, for Plastic) and the motor cover (M3 X 6).

**Note:** Keep the front cover for future use which you remove the peeler unit.



**Note:** Use specified screw for the covers.  
Do not use wrong type screw, otherwise the screw hole of the printer housing will be damaged.

# User Guide

---

## Contents

Caution .....	8
1 Outline .....	9
2 Exterior view and part names .....	9
3 How to operate .....	10
3-1 Operation .....	10
3-1-1 Peeler door opening/closing .....	10
3-1-2 Media loading .....	10
3-1-3 Peeler setting .....	10
3-1-4 Initial value of peeling position .....	11
3-1-5 Peeler commands .....	12
4 Peeler specifications .....	13



## **CAUTION**


- Always use the peeler with the door closed except when the media is loaded into the peeler.
- Do not push down the door roughly when it is opened, which may cause damage to the hinge of the door.
- Use the media that meets standard requirements. If not, the liner and label may be jammed in the peeler.
- Wipe off dirt or glue stuck to the peeler with a soft cloth soaked in a neutral detergent.
- Do not use volatile liquids such as benzine and thinner, which may cause the roller rubber and plastic parts to deteriorate.



## 1 Outline

This peeler unit is designed to automatically remove the label from the liner.

## 2 Exterior view and part names

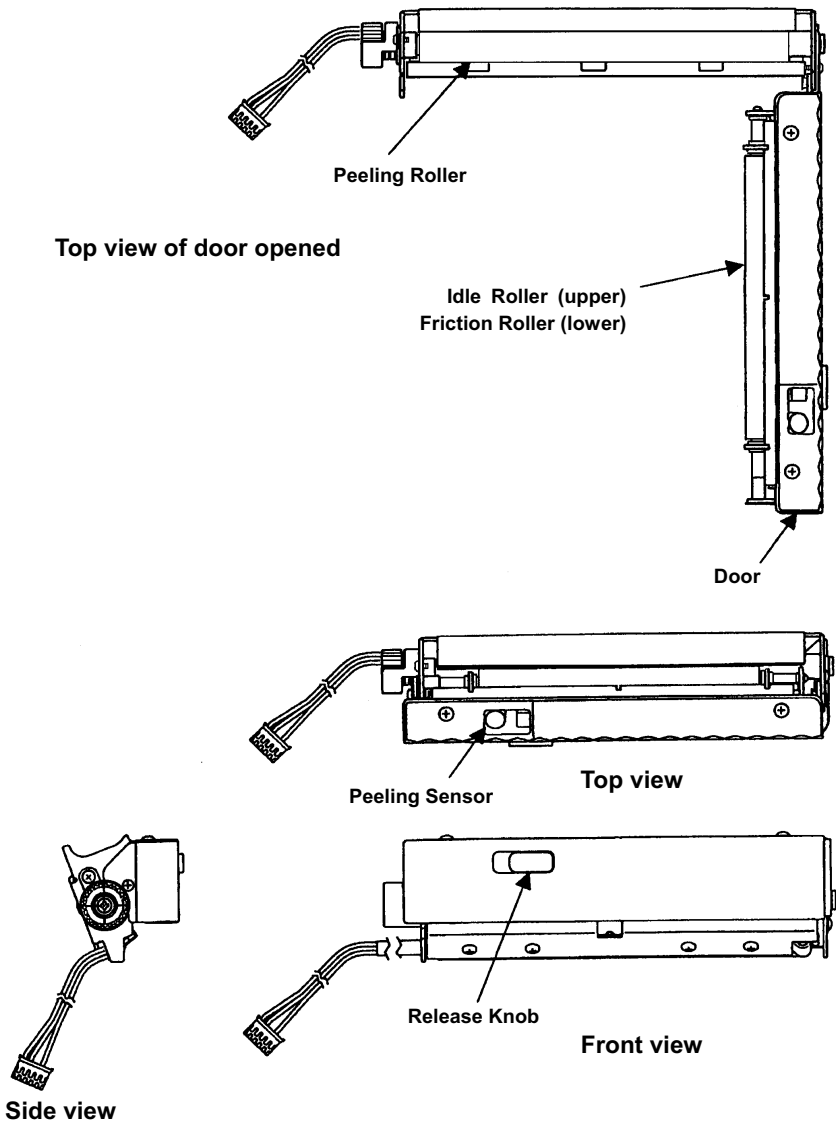

## **3 How to operate**

### **3-1 Operation**

#### **3-1-1 Peeler door opening/closing**

- (1) **Opening**  
Shift the release knob of the peeler to the left with the finger, and the peeler door will open.
- (2) **Closing**  
Push down the left end of the peeler door until it clicks closed.

#### **3-1-2 Media loading**

- (1) First peel off the labels with a length of 12cm (5 inch) or more on the top of the loading media, then load the media into the peeler where the first label comes to the peeling sensor. Close the print head of the printer.
- (2) Open the peeler door and pass the liner between the peeling roller and the peeler door and close the door.

#### **3-1-3 Peeler setting**

To use this peeler, set the peeler function ON that is one of the various setting items in a nonvolatile memory in the printer.

To change the setting of the peeler function, execute it in the printer configurations setting mode from the control panel or use the command STX KD.

The printers have the menu “AutoConfigure” set to ON when shipping from the factory. In this ON condition, if the peeler is installed on the printer, the menu “Function Select” will be automatically changed to “Peel On.” But if the Off condition occurs, select the “Peel On” in the following manner. (For details of menu setting, refer to the operation manual of each printer.)

### 3-1-4 Initial value of peeling position

The paper position for peeling off the label can be adjusted in the printers menu. See an excerpt of the printer menu and the web panel.

```

Mode/Repeat Key      Disabled
Save=(PAUSE) Change Value=(STOP) Exit=(MODE)

Paper Position       +0.00IN
                    ^
Save=(PAUSE) Next Digit=(FEED) Change Value=(STOP)
                    Exit=(MODE)

AutoConfigure        ON
Save=(PAUSE) Change Value=(STOP) Exit=(MODE)

Do you want to change "After Print Menu" items?
Yes=(PAUSE) No=(STOP) Exit=(MODE)
  
```

**Printer**  
[Top Menu](#) > AfterPrintSetup

---

AutoConfigure  ON ▾


Function Select  Peel On ▾

Paper Position  Inch

Mode/Repeat Key  Disabled ▾

---

To adjust the peeling position, designate the feeding amount from the reference point to the peeling position with the command STX f or STX Kf. The value with this command will be effective until the resetting is performed. (For details, see the separate Command Reference.)

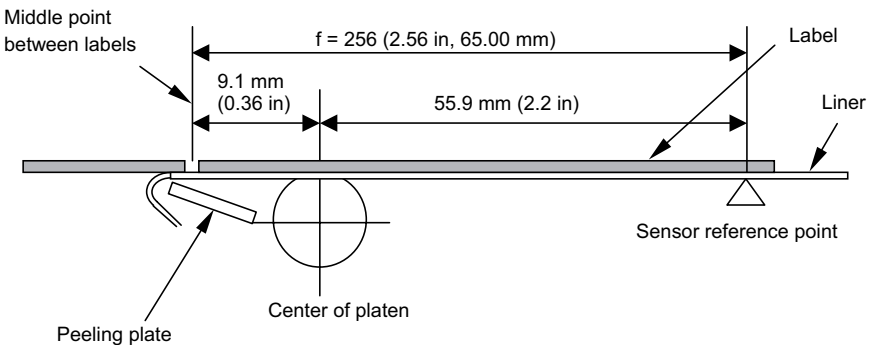

### **3-1-5 Peeler commands**

The following are the peeler commands. For details of each command, see the separate Command Reference.

#### **Peeling position designated command STX f, STX Kf**

This command designates the feeding amount from the reference point to the peeling position.


#### **Software switch setting command STX V**

This command temporarily changes the contents of the option function setting in a nonvolatile memory in the printer. With this command, the peeler function is turned ON or OFF temporarily.

**Note:** If the label is at peeling position when the peeler function is selected, the medial will not feed even if the Feed key is pressed. In this case, remove the label first.

## 4 Peeler specifications

- Width of liner (a) : 1 – 4.65 in (25.4 – 118 mm)
- Length of label (b) : 1 – 4.72 in (25.4 – 120 mm)  
Label: fine media/Thickness: 0.09 mm  
(including glue layer)/Rolled inwards
- Minimum width of label (c) : Label must be positioned at 0.63 – 0.87in  
(16 – 22 mm) from left edge of liner,  
which is viewed from front of media exit
- Maximum width of label : To be narrower than liner
- Thickness of label : 0.0067 in (0.17 mm) or less
- Thickness of liner : 0.0027 in (0.07 mm) or less
- Maximum diameter of roll media : 8 in (203 mm)
- Inner diameter of roll media : 3 in (76 mm) or more
- Durability : 100 km or one million peeled labels (when using  
the label above)
- Peeling position accuracy :  $\pm 1.0$  mm  
Peeling position varies depending on the type of  
media, the size of roll media and the size of ink  
ribbon, so adjust it to the optimum condition as  
needed

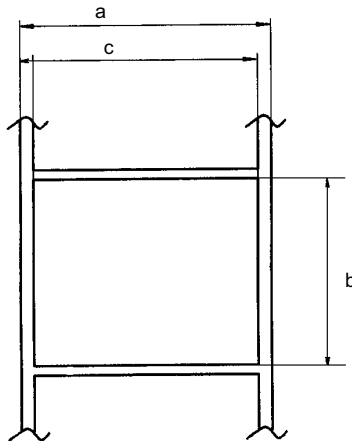

Direction of media feed

## **DASCOM REPRESENTATIVES**

### **GERMANY**

DASCOM Europe GmbH  
Heuweg 3  
D-89079 Ulm  
Deutschland  
Tel.: +49 (0) 731 2075 0  
Fax: +49 (0) 731 2075 100  
[www.dascom.com](http://www.dascom.com)

### **SINGAPORE**

DASCOM AP Pte Ltd  
63 Hillview Avenue  
#08-22, Lam Soon Industrial Building  
Singapore 669569  
Phone: +65 6760 8833  
Fax: +65 6760 1066  
[www.dascom.com](http://www.dascom.com)

### **AMERICAS**

DASCOM Americas Corporation  
421 W. Main Street  
Waynesboro, VA 22980  
USA  
Phone: +1 (877) 434 13 77  
[www.dascom.com](http://www.dascom.com)

### **UNITED KINGDOM**

DASCOM GB Ltd  
ViewPoint, Basing View,  
Basingstoke, Hampshire  
RG21 4RG, England  
Phone: +44 (0) 1256 481481  
Fax: +44 (0) 1256 481400  
[www.dascom.com](http://www.dascom.com)

### **FRANCE**

DASCOM Europe GmbH  
117 Avenue Victor Hugo  
92100 Boulogne-Billancourt  
France  
Phone: +33 (1)73 02 51 98  
[www.dascom.com](http://www.dascom.com)

### **RUSSIA and CIS**

DASCOM Europe GmbH  
Representation Moscow  
Leninsky Prospekt 95a, Office 322  
119313 Moscow, Russian Federation  
Phone: +7 (495) 984 70 65  
Fax: +7 (495) 984 56 42  
[www.dascom.com](http://www.dascom.com)

### **CEE**

DASCOM Europe GmbH  
Europaring F15 301  
2345 Brunn a. G.  
Austria  
Phone: +43 (1) 236 01 70 10  
[www.dascom.com](http://www.dascom.com)